

How to Install EuroGuard Combi

(Key installation Instructions for timber components)

Thank you for choosing Jacksons Fencing. Our high quality fencing products will last for years and give you trouble-free service if you follow the installation instructions below, which are offered as a general guide.

STEP 1: Erect the Euroguard panels, 50-80mm above ground. Lay down the BOTTOM CAPPING and insert 5 number of COMBI SLATS from one end to the other end of EUROGUARD at different positions marked as 1 to 5 in the Figure.




STEP 2: Push the BOTTOM CAPPING up against the inserted COMBI SLATS and fix them in place using Screws M4 x 45mm from front side of the EUROGUARD




STEP 3: Insert all the remaining COMBI SLATS and fix 3 of them to the BOTTOM CAPPING using Screws M4 x 45mm self drive (other than the 5 COMBI SLATS already fixed to the EUROGUARD from front side).


STEP 4: Insert the TOP CAPPING to the assembly

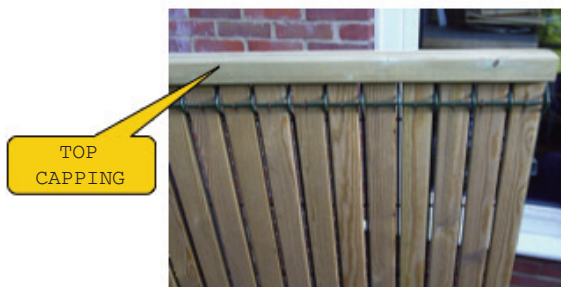

STEP 5: Fix the same COMBI SLATS which are already fixed to the BOTTOM CAPPING, to the TOP CAPPING from Front and Back side of the EUROGUARD using Screws M4 x 45 self drive.

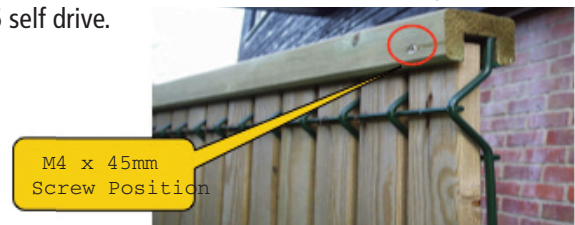

STEP 6: Fix the Post Cover Strip on each post as shown, using Screws M8 x 80mm self drive, at 3 different positions along its length.

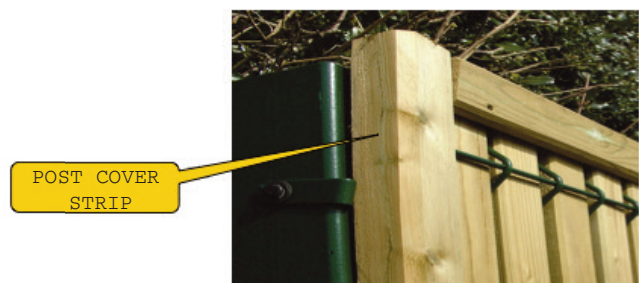

Safety Notes:

Biocidal Products Regulation (EU528/2012):

Jakkured articles incorporate biocidal products to protect against wood destroying organisms.

Active ingredients include: Copper(II)Carbonate / Copper(II)Hydroxide / Propiconazole / Tebuconazole

Wear gloves when handling freshly treated wood. Avoid breathing dust when cutting. Dispose of off-cuts responsibly – do not burn.

Jacksons Fencing Head Office Stowting Common Ashford Kent TN25 6BN
 Tel +44 (0) 1233 750393 Fax +44 (0) 1233 750403
 www.jacksons-fencing.co.uk info@jacksons-fencing.co.uk

Jacksons
 Guaranteed Quality since 1947
 www.jacksons-fencing.co.uk